TOSIBOX lock Mise en service rapide

Appairage de la clé à votre Tosibox





 4^e) Le voyant de la clé s'éteint 2 sec puis se rallume.
 Votre Tosibox est appairée.



TOSIBOX lock Mise en service rapide



Connecter votre PC ou Mac à la Tosibox (Lock) à l'entrée service puis tapez l'adresse : 172.17.17.17

Tosibox Lock tb-109ab9006b6c Refresh				
Internet connection: FAIL	WAN port IP:	LAN IP: 192.168.0.1	LAN address ranges	
Mode: Lock	3G IP:	LAN DHCP server: OFF	Static: 192.168.0.2 - 192.168.0.254	
	WLAN client IP:	WLAN: OFF	DHCP:	
Tosibox devices Show all	Network	devices Show all details		
Tosibox Lock tb-109ab9006b6c				
Keys				
	Tos	ibox Lock tb-109ab9006b6c - Software version v2.14.0		
		Connec	tion à la Tosibox	
USIDUX				
rization Required				
		Usernar Passwoi	me: admin	
Tosibox Lock Product code: TBL1				
S/N AC013638 900500 OULU FINLAND			Login	
Username: admin Password:	Langagerra	rd ag gitug ay dag da la Ta	ibov	
IP: 10.14.206.129 Netmask: 255.255.192	Le passwoi	tu se situe au dos de la 10	SIUUX	
CE S www.tosibox.com				
				_
	N I			
			 _	

TOSIBOX lock

STATUS SETTINGS NETWORK		🥔 Logot	ıt (admin)
Interfaces Wireless Static routes Routes and MA	Cs WAN priority DHCP		
LAN WAN 3G WLAN client			
Interfaces			
Interface Overview			•••••
hetwork	Status	Actions	
	Uptime: 0h 30m 49s		
LAN	RX: 0.00 B (0 Pkts.)	Edit	
	IPv4: 192.168.0.1/24		
WAN 📐	MAC Address: 10:94:B9:00:68:6D RX: 0.00 B (0 Pkts.)	Edit	
36	RX: 0.00 B (0 Pkts.)	Edit	
WI AN client	TX: 0.00 B (0 Pkts.)		
WLAN Client	Disabled	Cuit	
	\mathbf{X}	/	
	Tosibox Lock tb-109ab9006b6	c - Software version v2.14.0	
1			
ez sur Network		Puis éditer le Lan	
	\mathbf{X}		
	Lowan (réconsint	() (DUCD 1/(1)	
TOSIBOX STATUS SETTINGS NETWORK	Le wall (leseau lift	ernet) est en DHCP par default	ıt (admin)
TOSIBOX STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA	I.E. WAIT (TESEAU THU	ernet) est en DHCP par default	ıt (admin)
TOSIBOX STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN client	Is WAN priority DHCP	ernet) est en DHCP par default	ıt (admin)
TOSIBOX STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client -AN configuration	Is WAN priority DHCP	ernet) est en DHCP par default	ıt (admin)
TOSIBOX STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client AN configuration Common Configuration	Is WAN priority DHCP	ernet) est en DHCP par default	ıt (admin)
TOSIBOX STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client AN configuration Common Configuration General Setup	Is WAN priority DHCP	ernet) est en DHCP par default موادع	ıt (admin)
TOSIBOX STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN client AN configuration Common Configuration General Setup Status	Ite Wall (Teseau IIIu 35 WAN priority DHCP Uptime: 0h 31m 265 MAC Address: 10:9AB	9:00:68:6C	ıt (admin)
STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client -AN configuration General Setup Status	Le Wall (Teseau IIIu S WAN priority DHCP Uptime: 0h 31m 266 MAC Address: 10:94:B RX: 0:00 B (0 Pkts.) TX: 294:00 B (7 Pkts.)	9:00:68:6C	tt (admin)
TOSIBOX STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MAR LAN WAN 3G WLAN client AN configuration Common Configuration General Setup Status	Le Wall (leseau illu s WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10.9A:80 RX: 0.00 B (0 Pkts.) TX: 294.00 B (7 Pkts.) IPv4: 192.168.0.1/24	9:00:68:6C	ıt (admin)
STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MAI LAN WAN 36 WLAN client AN configuration General Setup Status Status Protocol	Le Wall (Teseau IIIu S WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10,9AB RX: 0.00 8 (0 PKs.) IX: 294.00 B (7 PKs.)	9:00:68:6C	rt (admin)
STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client AN configuration Common Configuration General Setup Status Status Protocol IPv4 address	S WAN priority DHCP Uptime: 0h 31m 26s. MAC Address: 10:94:BP RX: 0:00 B (0 Pfts.) TX: 294:00 B (7 Pfts.) IPv4: 192.168.0.1/24 Static address • 192.168.0.1 • Empty IP address •	ernet) est en DHCP par default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default Comparison default	it (admin)
STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN client LAN configuration General Setup Status Protocol IPv4 address IPv4 address	Le Wall (Teseau IIIu S WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10-9A8 RX: 0.00 B (7 Pks.) IPV4: 192.168.0.10 Static address • 192.198.0.1 Empty IP address not breaks Key connections a	9:00:68:6C	it (admin)
STATUS SETTINGS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 3G WLAN client AN configuration General Setup Status Protocol IPv4 address IPv4 entmask Ipv4 address	Le Wall (Teseau IIIu S WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10:9A:88 RX: 0.00 8 (0 Mts.) TX: 294.00 8 (7 Mts.) IPv4: 192.168.0.1/24 Static address • 162 168.0.1 • Empty IP address net breaks Key connections a 255 255 255 0 •	ernet) est en DHCP par default	it (admin)
STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MAI LAN WAN 3G WLAN client AN configuration General Setup Status Protocol IPv4 address IPv4 pateway IPv4 gateway	Le Wall (reseat inter- s WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10:9A8) RX: co0 8 (0 PKs.) IX: 294.00 8 (7 PKs.) IX: 294.	ernet) est en DHCP par default Cogot 9:00:68:6C allowed. If you want to remove IP address, change protocol to 'unmanaged'. Note that removing IP address in makes sense only in Sub Lock mode. ou know you need to use it.	it (admin)
STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN client AN configuration General Setup Status Protocol IPv4 address IPv4 netmask IPv4 gateway IPv4 proadcast IPv4 proadcast	Le Wall (Tesseatt Inte S WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10:9AB) RX: 0:00 8 (0 PKs.) IX: 294.00 8 (7 PKs.) IV-4: 192.168.0.1/24 Static address • 192.168.0.1 Static address • 192.168.0.1 Exposed for the state of	ernet) est en DHCP par default Compared en alle alle alle alle alle alle alle a	it (admin)
STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 35 WLAN clent AN configuration General Setup Status Protocol IPv4 address IPv4 gateway IPv4 gateway IPv4 broadcast IPv4 broadcast	S WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10.9AB RX: 0.00 B (0 PKts.) IX: 294.00 B (7 PKts.) IV-4: 192.168.0.124 Static address • 192.168.0.1 Static address • 192.168.0.1 Static address • 255.265.265.265.0 Leave empty unless y Leave empty unless y Leave empty unless y	9:00:58:6C	it (admin)
STATUS SETTING NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN clent A AN configuration General Setup Status Status Protocol IPv4 address IPv4 aetway IPv4 protocast	I CE WAIT (TESEAU THU S WAN priority DHCP Uptime: 0h 31m 265 MAC Address: 10:9A:B RX: 0.00 B (0 Pkts.) IX: 294.00 B (7 Pkts.) IPv4: 192.168.0.1/24 Static address • 192.168.0.1 © Empty IP address • 0 Empty IP address • 0 Leave empty unless y 0 Leave empty unless y	ernet) est en DHCP par default Cogot 9:00:68:6C allowed. If you want to remove IP address, change protocol to 'unmanaged'. Note that removing IP address in makes sense only in Sub Lock mode. ou know you need to use it. ou know you need to use it.	rt (admin)
STATUS SETTING NEWORK DETWORK LAN WAN 36 WLAN client DETWORK LAN Configuration Ceneral Setup Status Ceneral Setup Status Deve detemp IPv4 address Deve detemp IPv4 netmask IPv4 gateway IPv4 broadcast Deve detemp	I CE WAIT (TESEAU THU S WAN priority DHCP Uptime: 0h 31m 265 MAC Address: 109A88 RX: 0.00 B (0 Pkts.) TX: 294.00 B (0 Pkts.) TX: 294.00 B (7 Pkt	ernet) est en DHCP par default Compared en address, change protocol to 'unmanaged'. Note that removing IP address and makes sense only in Sub Lock mode. Do know you need to use it. Do know you need to use it.	it (admin)
STATUS SETTINS NETWORK Interfaces Wireless Static routes Routes and MA LAN WAN 36 WLAN client LAN VORTO Common Configuration Ceneral Setup Status Protocol IPv4 address IPv4 netmask IPv4 gateway IPv4 broadcast IPv4 broadcast	Le Wall (researd into s WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10:9A:8 RX: 204,00 B (0 Pkts.) IFV4: 192,168.0.1/24 Static address • 192,168.0.1 © Empty IP address not performer to a 255,255,255 0.• © Leave empty unless y @ Leave empty unless y @ Leave empty unless y	ernet) est en DHCP par default Cogot 9:00:58:6C 1 allowed. If you want to remove IP address, change protocol to 'unmanaged'. Note that removing IP address and makes sense only in Sub Lock mode. 1 ou know you need to use it. 1 ou know you need to use it.	it (admin)
STATUS SETTING NETWORK Interfaces Wireless Statuc routes Routes and MA LAN WAN 3G WLAN client AN Configuration General Setup Status General Setup Status Interfaces Interfaces Protocol IPv4 address Interfaces Interfaces IPv4 pateway IPv4 broadcast Interfaces Interfaces Attention legréseau pard Interfaces Interfaces	Le Wall (reseau inte s WAN priority DHCP Uptime: 0h 31m 26s MAC Address: 10:9A,8P RX: 204,00 B (7 Pkts.) IFV4: 192.168.0.1/24 Static address • 192.188.0.1 © Empty1 Paddress • 192.188.0.1 © Empty1 Paddress • 192.188.0.1 © Leavy empty unless y @ Leavy empty unless y @ Leavy empty unless y @ Leavy empty unless y @ Leavy empty unless y	ernet) est en DHCP par default Cogot Store Compared to use it. Store Compared to use it. Store Compared to use it. Construction of the store of	rt (admin)



TOSIBOX key

Insérez la clef Tosibox sur votre PC

A				
om	Modifié le	Туре	Taille	
.tosibox	22/06/2015 13:46	Dossier de fichiers		
TosiboxClient.app	22/06/2015 13:46	Dossier de fichiers		
autorun.inf	22/06/2015 13:46	Informations de c	1 Ko	
💡 key.ico	19/12/2012 15:10	Icône	107 Ko	
Setup_Tosibox.exe	29/07/2014 09:16	Application	154 Ko	
🟹 token-12490.crt	06/07/2015 14:55	Certificat de sécur	2 Ko	

Ouvrir le dossier Tosibox puis installer le logiciel Setup_Tosibox.exe. (*Opération à effectuer qu'une seule fois*)



Saisir un mot de passe qui permettra l'accés à votre clef Tosibox.



TOSIBOX



Cadenas rouge aucune connexion internet Cadenas orange liaison établie. Cliquez sur connect, la liaison avec votre lock est en cours.

